



IMPORTANT
WORKS EXCLUSIVELY WITH
XTREME GARAGE® AND
PERFORMAX™ DOOR OPENERS
AND ACCESSORIES

⚠ WARNING

To Prevent SERIOUS INJURY or DEATH:


- Keep transmitter and battery out of reach of children.
- NEVER permit children to access the Push Button or remote transmitters.
- Operate the door ONLY when it is properly adjusted, and there are no obstructions present.
- ALWAYS keep a moving door in sight until completely closed. NEVER cross the path of a moving door.



To reduce risk of fire, explosion or electric shock:

- DO NOT short circuit, recharge, disassemble or heat battery
- Replace with 23AE 12 volt batteries ONLY. Dispose of batteries properly.

Programming Transmitter

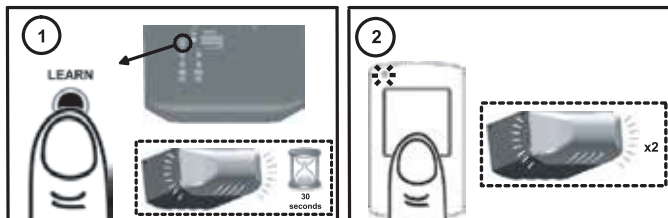

To Program Transmitter(s):

1. To program a hand held transmitter, press the "LEARN" button on the control panel on the rear of the opener. The courtesy light will illuminate* and the opener will make an audible "click". The unit is now ready to accept a transmitter. (Fig.1)
2. Within 30 seconds, press the button on the hand held transmitter. (Fig.2)
3. The courtesy light will flash twice indicating the hand held transmitter is stored successfully**.

Up to 20 transmitters (including wireless keypad codes) can be added to the unit by repeating the above procedures.

If more than 20 transmitters are stored, the first stored transmitter will be replaced. (i.e. the 21st transmitter replaces the 1st transmitter.)

* If the courtesy light is already on, it will flash once and stay illuminated for 30 seconds.

** If a transmitter is not accepted, the courtesy light will stay on for 30 seconds, flash 4 times and then stay on for 2-1/2 minutes. Retry programming the transmitter by repeating the steps above.

Removing ALL Transmitter(s):

To remove ALL transmitters from memory, press and hold the "LEARN" button for 5 seconds. The courtesy light will flash 7 times, indicating ALL transmitters have been removed from memory.



IMPORTANT
WORKS EXCLUSIVELY WITH
XTREME GARAGE® AND
PERFORMAX™ DOOR OPENERS
AND ACCESSORIES



Replacing Transmitter Battery:

When the battery of the hand held transmitter is low, the indicator light will become dim and/or the range of the transmitter will diminish. To replace the battery, remove the battery cover from the transmitter as shown above. Replace with a 23AE 12 volt battery. Note the polarity direction of the battery shown in the figure above.

One-Year Limited Warranty:

If, during normal use, this Performax Garage product breaks or fails due to a defect in material or workmanship within one year from the date of original purchase, simply bring this item and its sales receipt back to your nearest Menards retail store for a free equivalent replacement within that one year.

This warranty:

- (1) excludes expendable parts including but not limited to light bulbs and/or batteries;
- (2) shall be void if this product is used for commercial and/or rental purpose; and
- (3) does not cover any losses, injuries to persons/property or costs.

This warranty does give you specific legal rights and you may have other rights, which vary from state to state.

This device complies to FCC Rules for HOME OR OFFICE USE.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.