



IMPORTANT
WORKS EXCLUSIVELY WITH
XTREME GARAGE® AND
PERFORMAX™ DOOR OPENERS
AND ACCESSORIES

WARNING

To Prevent SERIOUS INJURY or DEATH:


- Keep transmitter and battery out of reach of children.
- NEVER permit children to access the Push Button nor remote transmitters.
- Operate door ONLY when it is adjusted properly with no obstructions to door travel and is in clear sight.
- ALWAYS keep a moving door in sight until completely closed, NO ONE should cross the path of a moving door.

To reduce risk of fire, explosion or electric shock:

- DO NOT short circuit, recharge, disassemble or heat battery
- Replace with 23AE 12V batteries ONLY. Dispose of batteries properly.



Setting Keyless Entry

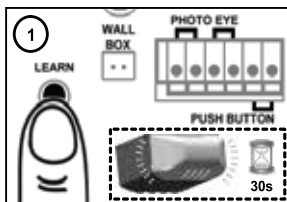

To Add Personal Code:

1. Press "LEARN" button on the rear control panel, the courtesy light will glow with click". The unit is ready to accept a transmitter in the coming 30 seconds.
2. Enter 1 - 6 digit(s) personal code on Keyless Entry within 30 seconds and press "ENTER" button.
3. Courtesy light flashes twice indicating personal code is stored in memory.

Up to 20 personal codes (including 1-button transmitters) can be added to the unit by repeating the above procedures.

If more than 20 personal codes are stored, the previously stored one from the very beginning will be replaced, i.e. the 21st transmitter replaces the 1st stored one.


* If the courtesy light is already on it will flash once and stay steadily for 30 seconds.

Operation:

To access the door, enter a pre-stored personal code and press "ENTER" to transmit code, and within 20s, "ENTER" button can be used to stop or reverse the door.

If code is entered wrongly, correction can be made by pressing "ENTER" to reset and re-enter code.

During nighttime, "ENTER" may be pressed in advance to turn on backlit.

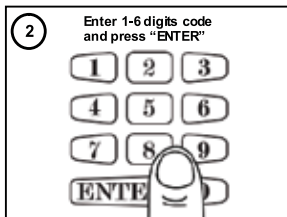

Mounting the Keyless Entry:

On door jamb face outside your garage, locate Keyless Entry within sight of door at minimum height of 5 feet (1.5m), ensure it is away from reach of children and moving parts of door and hardware. Check the reception of Keyless Entry placement before mounting. Change location for better reception if necessary.

Replacing Keyless Entry Battery:

When the battery of Keyless Entry is low, dimmed illumination is observed. To replace battery, remove the battery cover by loosening the screws underneath, replace the battery with a 9V battery.

This device complies FCC Rules for HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Removing ALL Personal Code(s):

To remove ALL personal code(s) and /or transmitters from memory, press and hold the "LEARN" button above 5s. The courtesy light will then 7 times, indicating ALL codes/transmitters have been removed from memory.



IMPORTANT
WORKS EXCLUSIVELY WITH
XTREME GARAGE® AND
PERFORMAX™ DOOR OPENERS
AND ACCESSORIES

One-Year Limited Warranty:

If, during normal use, this Performax Garage product breaks or fails due to a defect in material or workmanship within one year from the date of original purchase, simply bring this item and its sales receipt back to your nearest Menards retail store for a free equivalent replacement within that one year.

This warranty:

- (1) excludes expendable parts including but not limited to light bulbs and/or batteries;
- (2) shall be void if this product is used for commercial and/or rental purpose; and
- (3) does not cover any losses, injuries to persons/property or costs.

This warranty does give you specific legal rights and you may have other rights, which vary from state to state.

Customer Service:
www.gdohelp.com
1-877-GDO-4402
1-877-436-4402