

UNPLUG THE OPENER FROM POWER!


FOR BEST RESULTS IT IS RECOMMENDED TO REMOVE THE GARAGE DOOR OPENER HEAD UNIT FROM THE RAIL SYSTEM, REMOVE LIGHT DOMES & PLACE AS SHOWN ON A FLAT SURFACE.

Remove Logic Board: 425-1665 Performax 1/2 HP Belt Drive Opener

1. Using a Phillips screwdriver, remove the back cover mounting screws and unclip the back from the housing at the bottom.



2. Unplug the leads from the motor that are connected to the logic board.

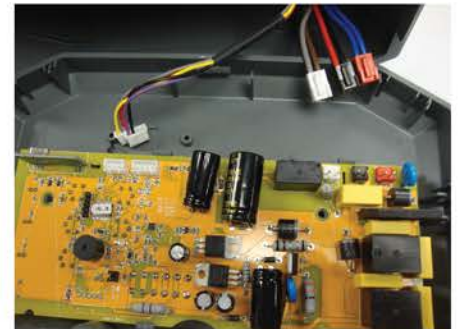

3. Remove the two silver screws in the logic board.




4. Release the logic board from the panel by pressing on the plastic clips at the edges of the board, one side at a time. Be careful not to break the clips.

A



B

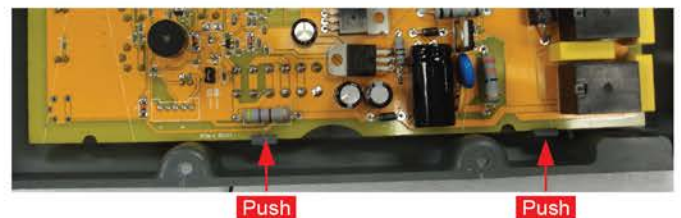

INSTALL THE NEW LOGIC BOARD by first threading the antenna wire through the hole in the panel, shown here. Then reverse these directions (start with step 4, then step 3, etc.).



Questions? Contact Us First:
www.gdohelp.com
1-877-436-4402