


# CONNECTING DELUXE DOOR CONTROL \* GARAGE DOOR OPENER WILL NOT OPERATE UNTIL PROGRAMMED \*

## Look in the box for:

Deluxe Door Control\*

2 x Lag Screws  
#6 x 1-3/8"

2 x Anchors



## ⚠ WARNING




To prevent **SERIOUS INJURY** or **DEATH** from electrocution or fire:

- Be sure power is **NOT** connected **BEFORE** installing door control.
- Connect door control **ONLY** to 12 VOLT low voltage wires.




To prevent **SERIOUS INJURY** or **DEATH** from a closing garage door:

- Install door control within sight of garage door, at a minimum height of 5 feet (1.5 m) so small children are not able to reach it, and away from **ALL** moving parts of door.
- **NEVER** permit children to operate or play with door control or remote controls.
- Activate garage door opener **ONLY** when door can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- **ALWAYS** keep a moving garage door in sight until completely closed. **NEVER** cross path of moving garage door.



Wire deluxe door control to power head as shown.

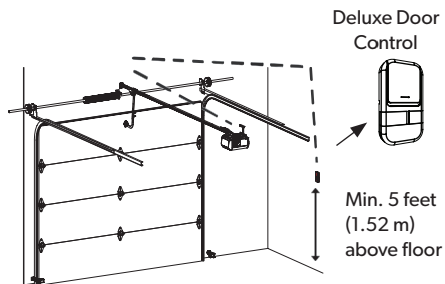

1. Strip 7/16 inch (11 mm) of insulation from wire and separate wires.
2. Connect one wire to each of the two screws on the back of the door control. \*DO NOT USE PRE-EXISTING WIRE\*
3. Mark the location of bottom mounting hole and drill 5/32 inch hole.
4. Install the bottom screw and allow 1/8 inch (3 mm) to protrude from wall. Note: Use anchors if mounting to drywall.
5. Position bottom hole of door control over the screw and slide down into place.
6. Lift actuation button and mark the top hole. Remove the door control from wall and drill 5/32 inch hole for top screw
7. Position bottom hole of door control over the screw and slide down into place. Fasten the top screw

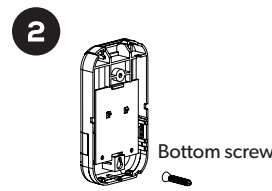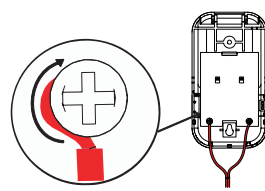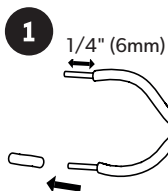

Connect plug from deluxe door control to wall panel outlet on the back panel of the power head.

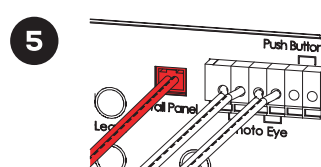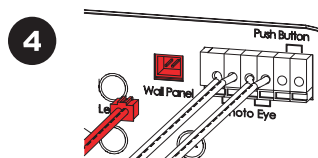

See how to use deluxe door control on page 30.